


■ Connections

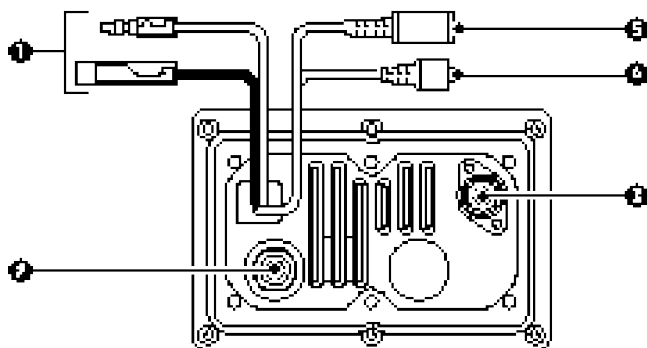

❶ DC POWER CONNECTOR

Connects the supplied DC power cable from this connector to an external 12 V DC power source.

❷ EXTERNAL MICROPHONE JACK

Connects to optional HM-127 REMOTE-CONTROL MICROPHONE.

CAUTION: NEVER connect other microphone such as the HM-134, etc. may cause damage the transceiver.

❸ ANTENNA CONNECTOR

Connects a marine VHF antenna with a PL-259 connector to the transceiver.

CAUTION: Transmitting without an antenna may damage the transceiver.

❹ GPS RECEIVER JACK

Connects to an optional GPS receiver to input the position data and time data.

• An NMEA0183 ver. 2.0 is required for position or time indication, etc. Ask your dealer about the GPS receiver.



❺ EXTERNAL SPEAKER JACK

Connects to an external speaker. See 'Options' on p. 43 for available external speakers.

MICROPHONE HANGER

Rest the supplied microphone on the hanger when not in use.

CAUTION: After connecting the DC power cable, GPS receiver jack and external speaker jack, cover the connector and jacks with an adhesion tape as shown below to prevent water seeping into the transceiver.

